

01-015-0079-0, 01-015-0080-0,
01-015-0081-0, 01-015-0082-0


Juli 2009

July 2009


De20090804

Anleitung:
Steckverbindung Superseal

Installation Instruction:
Superseal connector

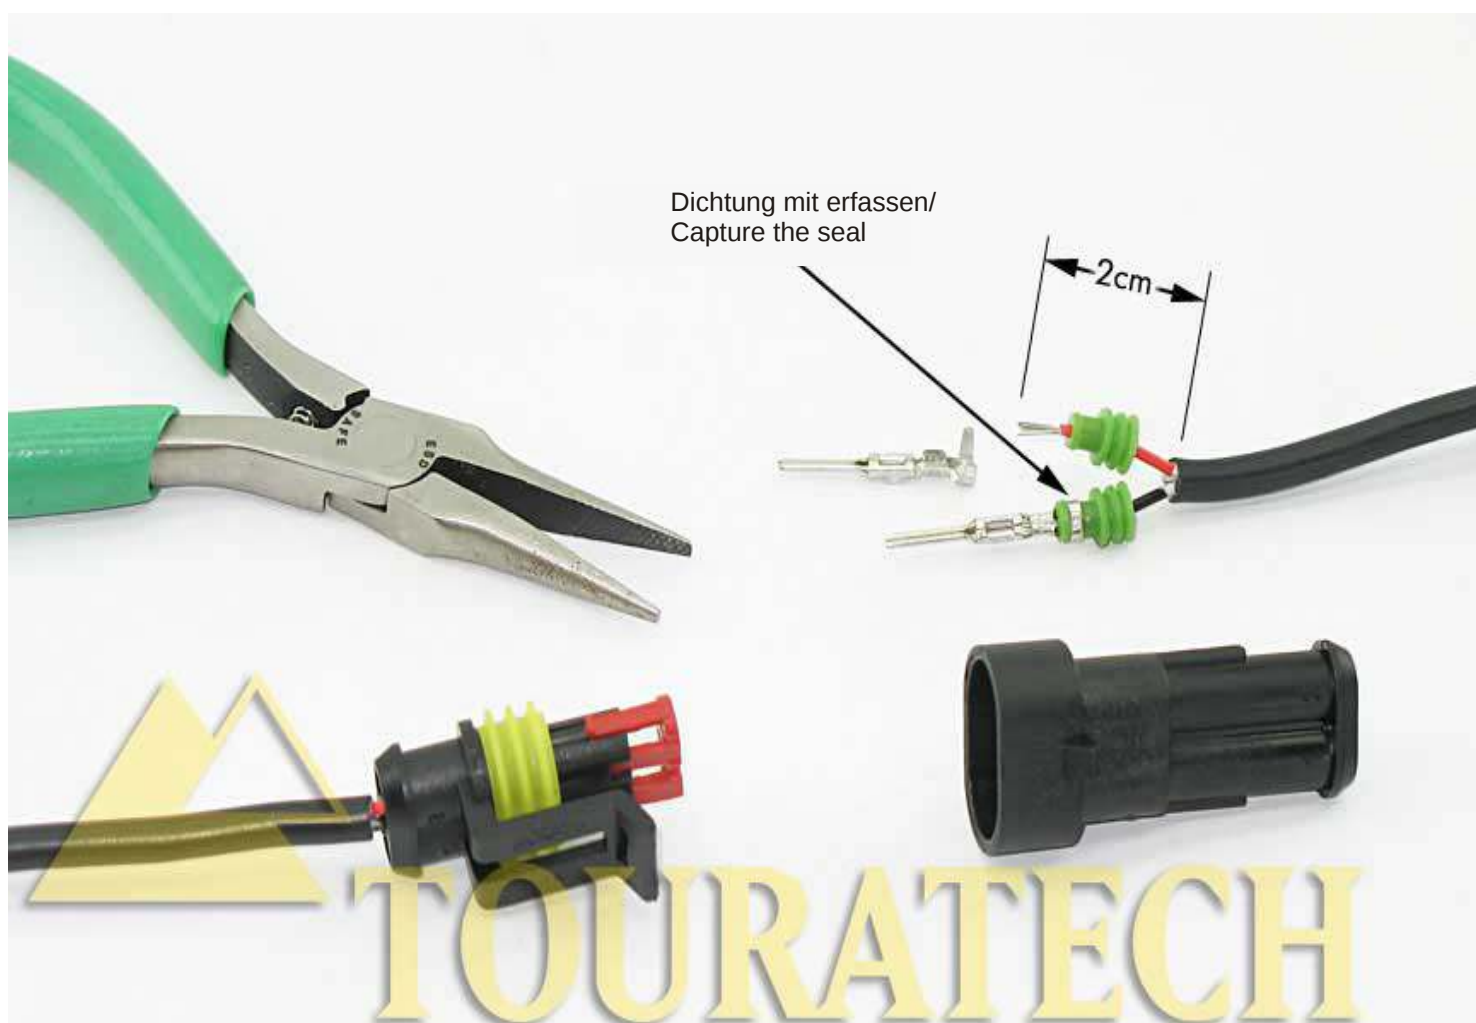


NOTE Angle this keeper slightly upward.
It won't slide straight in.

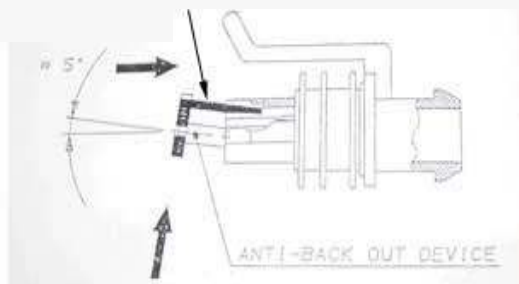

Insertion of crimped contacts into housing

Contacts can be inserted into housing cavitation in one position only.
The correct placing is shown here below:

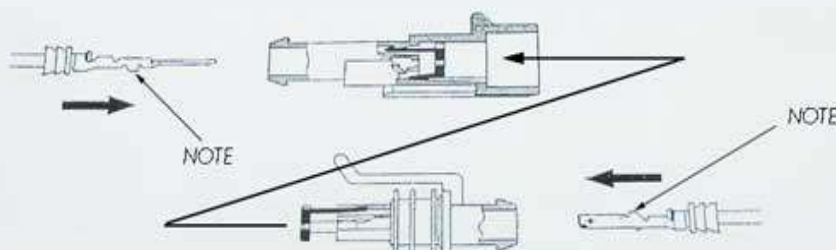

Diese Anleitung ist nach unserem derzeitigen Kenntnisstand verfasst. Rechtliche Ansprüche auf Richtigkeit bestehen nicht. Technische Änderungen vorbehalten.

These instructions are at our present level of knowledge. Legal requirements for correctness do not exist. Technical issues subject to change.